

eOne Diaphragm Change Guide

OVERVIEW

The Etatron eOne pump requires special care when changing its diaphragm. Follow the pictured steps to avoid damaging your pump.

STEP 1

When you have removed the pump head your eOne will look as pictured.



STEP 2

Insert two screws as pictured. This protects the underlying electronics.

You can use screws from the pump head or two spare M4 screws with M4 nuts.



STEP 3

You can now safely unscrew the diaphragm without damaging the pump.

After you have screwed on a new diaphragm then it is safe to remove the screws.

Without the screws to provide support the electromagnet will fall into the body of the pump and damage internal electronics.

