



# AG SELECT CONTROLLERS




## ALARM MENU



From main screen press the  button and keep pressing the  until "MENU ALARM" is shown

Press the  button to enter the menu

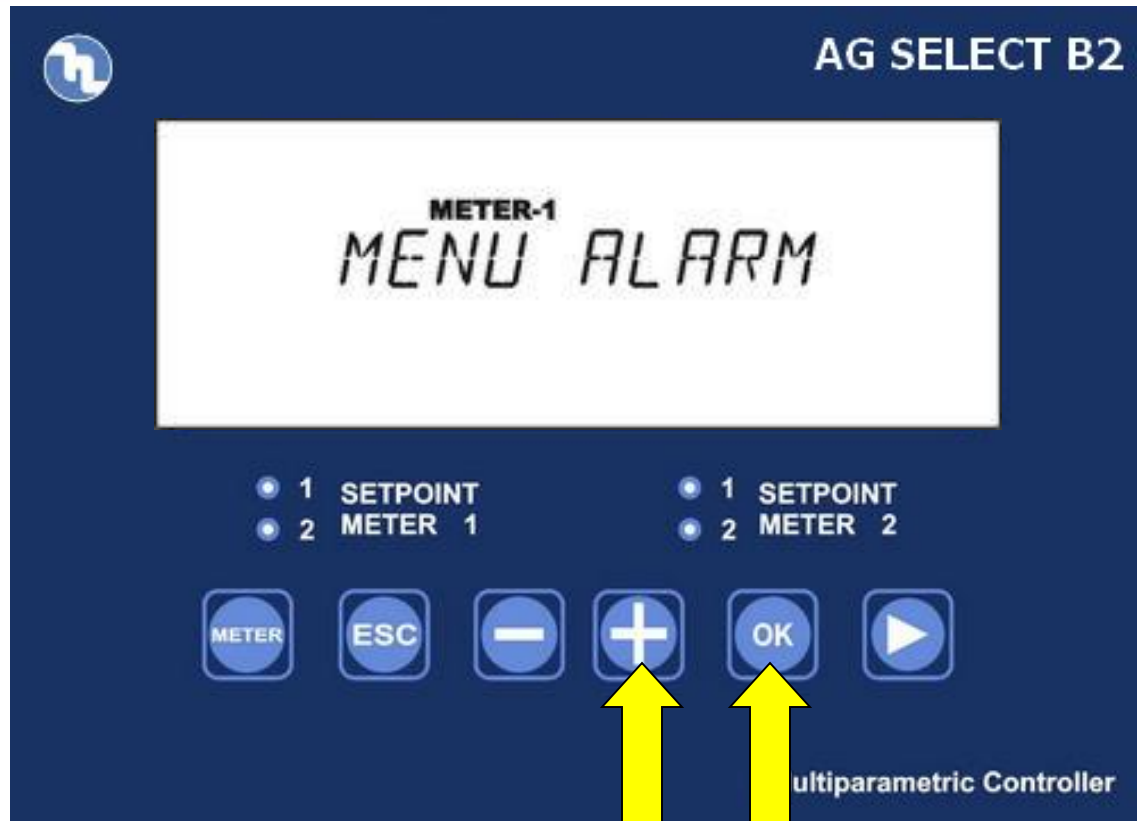

Three types of alarm can be set:

**MAX** – The controller raises an alarm **above** a given measurement value.

**MIN** – The controller raises an alarm **below** a given measurement value.

**OVER** – The controller can raise an **overdosing** alarm when the measurement value does not come back to the Setpoint value within the established time interval.

Change the settings using the Minus / Plus buttons

00:05 = 5 minutes



Raised alarms are shown on the left upper side of the display with their related parameter.

To clear the alarm press the ESC Button x 1. If the issue has not been correct properly the alarm will be displayed a second time

When the overdose alarm is displayed the instrument will turn off the pumps

